



Selecting the Proper Size Egress Window Well

STEP 1:

Measure and calculate dimension **A** as shown in the detail on the right based on the site's grade conditions and foundation height.

STEP 2:

Determine the required window well side panel height by performing this simple calculation:


$$\text{Required Side Panel Height} = \text{Dimension A} + 7\text{-}1/2\text{'}$$

From the first column in the table below, select the closest side panel height that will meet the site conditions.

STEP 3:

Once the side panel height has been determined, read across and select desired window width. With the window size selected, read across to select the proper window well and cover.

Note: Both ScapeWEL and StakWEL models satisfy building code requirements for emergency egress.

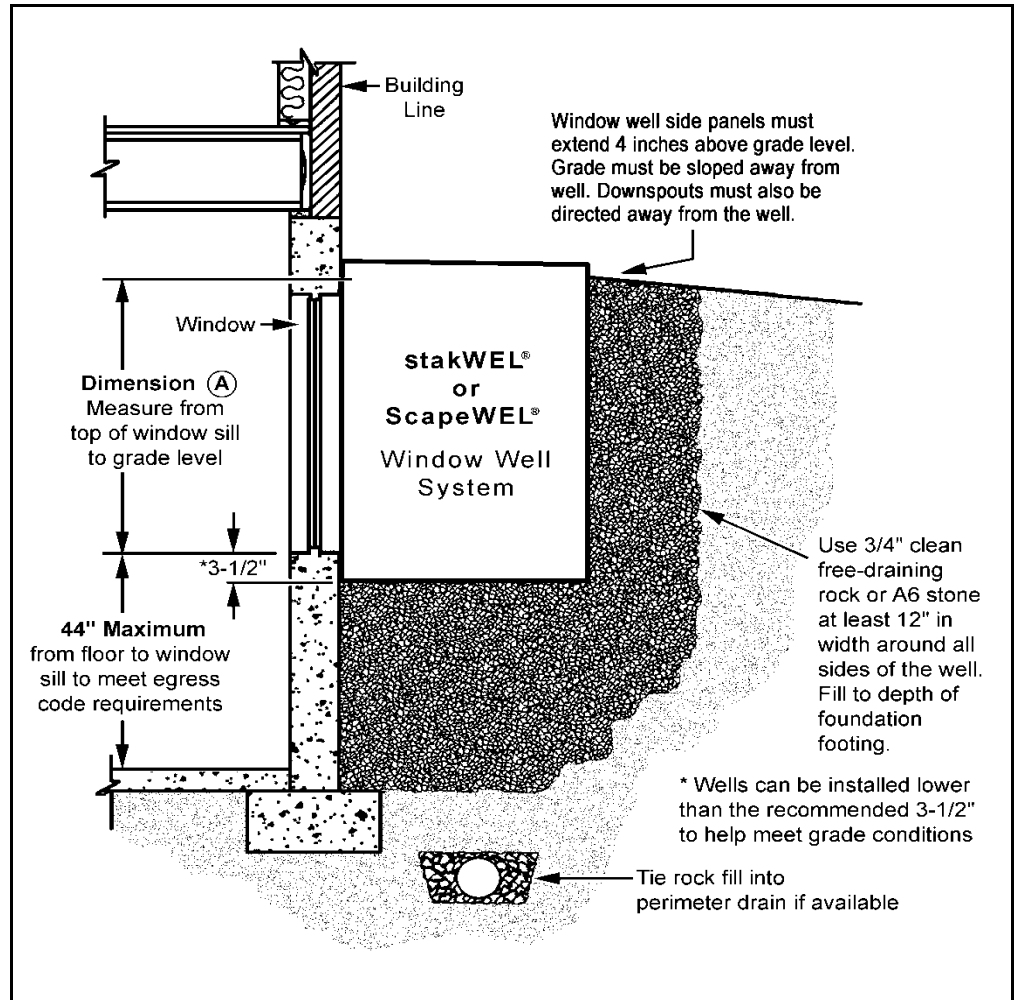

STANDARD SIZES AND MODEL NUMBERS

Side Panel Height	Window Width	ScapeWEL® Window Wells						StakWEL® Window Wells				
		Model #		No. of Tiers	Dimensions		Optional Dome Cover	Model #		Dimensions		Optional Dome Cover
		Well	Ext. Panel		Inside Width	Project from Foundation*		Well	Number of Modules	Inside Width	Project from Foundation	
48"	36"	4048-42	X	2	42"	41"	4042C	stkwl-48	3	49-1/2"	40-1/4"	stkwl-48D
	48"	4048-54	X	2	54"	41"	4054C	stkwl-48	3	49-1/2"	40-1/4"	stkwl-48D
	60"	4048-66	X	2	66"	41"	4066C	X	X	X	X	X
62"	36"	4862-42	X	3	42"	49"	4842C	stkwl-48	4	49-1/2"	40-1/4"	stkwl-48D
	48"	4862-54	X	3	54"	49"	4854C	stkwl-48	4	49-1/2"	40-1/4"	stkwl-48D
	60"	4862-66	X	3	66"	49"	4866C	X	X	X	X	X
81"	36"	4862-42	3019-42	3	42"	49"	4842C	stkwl-48	5	49-1/2"	40-1/4"	stkwl-48D
	48"	4862-54	3019-54	3	54"	49"	4854C	stkwl-48	5	49-1/2"	40-1/4"	stkwl-48D

X- Not available

* **Note:** On ScapeWEL models, the distance from the outside of the foundation wall to the inside face of the first step is 30" (76.2 cm)